

# Springtime Bird House Plans

[www.freewoodpuzzles.com](http://www.freewoodpuzzles.com)



## Springtime Bird House Instructions

### Material--

3/4" x 4 1/2" x 12" wood for two tapered ends

3/4" x 3" x 4 3/4" wood for two sides

3/4" x 4 1/2" x 9" wood for base

3/4" x 1" x 4 1/2" wood for two columns

Metal 5" x 20" for roof

1 1/2" finish nails

1 1/4" drywall screws

Wire for hanging

Red Paint

### Tools--

Saw

Hammer  
1 1/2" drill bit or hole saw  
3/16 drill bit  
Metal shears  
Drill


## **Instructions--**

Saw out tapered ends. Use pattern for tapered portion of ends. The straight portion on ends are 5" long.

Saw out two sides and base, assemble ends, sides and base using 1 1/2" finish nails.

Attach two columns to base using one screw through base for each column. Paint wood with red paint.

Bend metal roof over tapered ends and to columns. Drill 3/16" holes in metal in line with wood ends and top of columns. Install 6 to 10 wood screws depending upon contour of metal. Install hanging wire diagonally to roof screws.

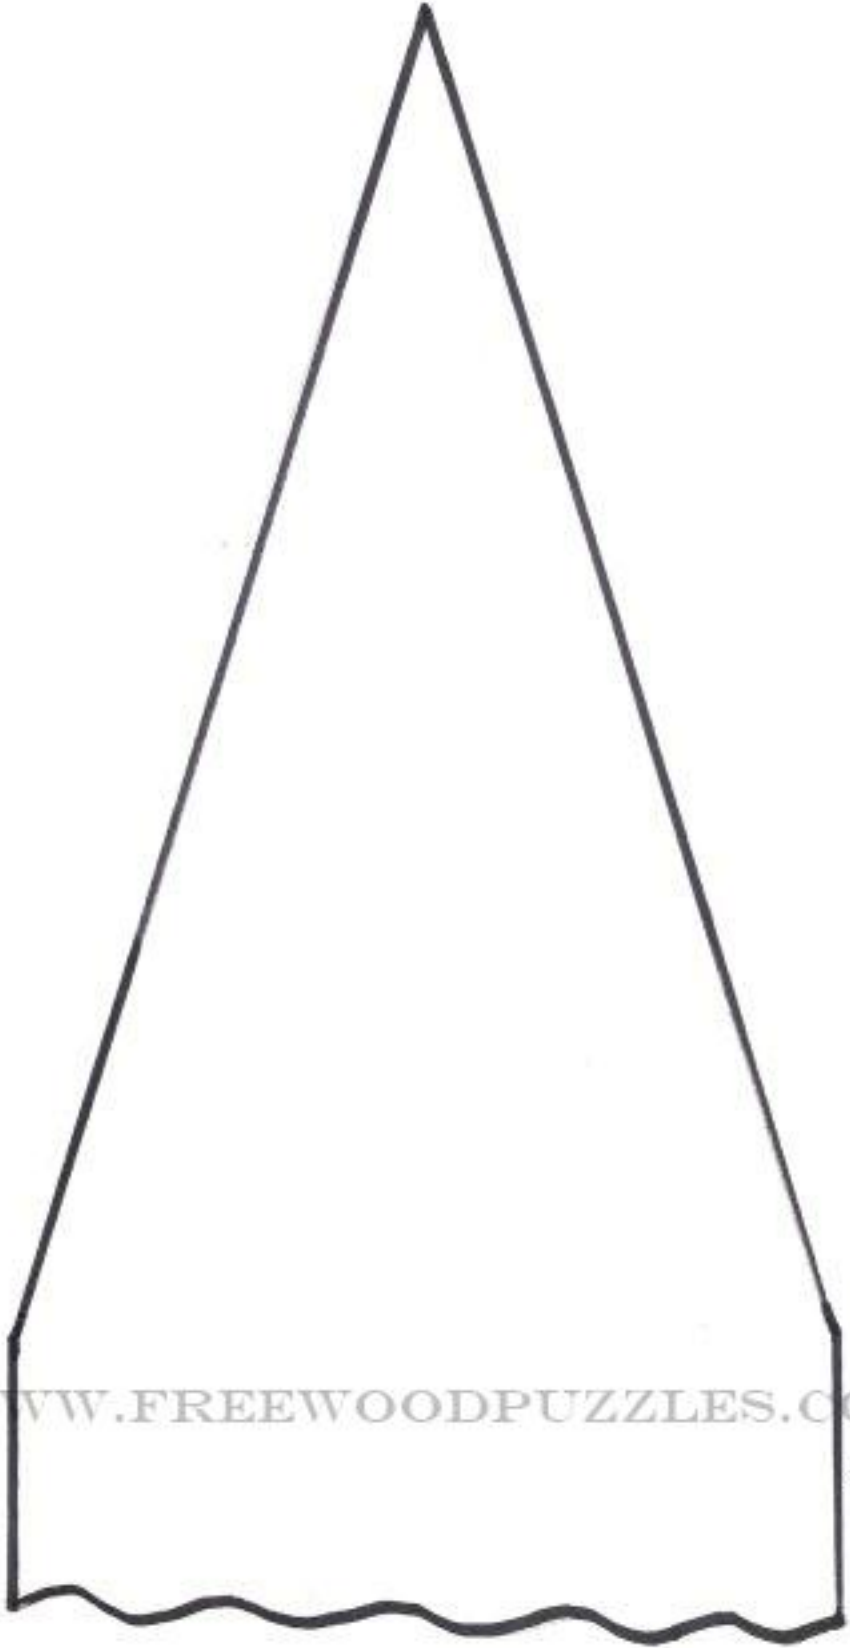

WWW.FREEWOODPUZZLES.COM

→ 5"

# Did you enjoy this plan?

If so visit [Ted's Woodworking](http://www.tedswoodworking.com) now and download over 16,000 plans and blueprints including bird feeders and bird houses.

